

4 Jaw Self - Centering Chuck



Owner's Manual

for the VM90, VMI00,
VMI20, VMI40 &
VMI50



Vicmarc Machinery Pty Ltd
Manufacturers of Quality
Woodturning Lathes and Accessories



Vicmarc Machinery Pty Ltd

52 Grice Street Clontarf QLD 4019 Australia

Phone (07) 3284 3103

Fax (07)3283 4656

Int Ph 61-7 3284 3103

Int Fax 61-7 3283 4656

Email vicmarc@vicmarc.com

Web www.vicmarc.com

Manufacturers of Quality Woodturning Lathes, Chucks and Accessories

Vicmarc Machinery, a family owned and operated business, has been manufacturing wood turning lathes and accessories for the hobbyist and professional since 1984. The company is dedicated to providing machinery of the highest quality and precision engineering which has secured sales worldwide.

Through constant improvement, Vicmarc retains its place as a leader in the field. Vicmarc lathes and chucks are known and respected internationally for their robust design and ease of use. Only the best materials and latest high precision, computer controlled machinery are used in the manufacture of Vicmarc products.

The company continues to respond to the demands of the market, updating and improving at all stages of manufacture.



Description

The Vicmarc 4 Jaw Self Centering Chuck is designed and manufactured in Australia by Vicmarc Machinery, utilising the precision, simplicity and reliability of the engineering chuck.

This chuck grips internally and externally, will hold round and square work, has a hollow centre so that through boring can be done from either end and can even be run clockwise or anticlockwise.

Manufactured from K1045 (medium tensile steel - 45 tonne) the chucks have a higher durability ensuring a longer life and a very high quality finish which is less susceptible to rust.

Vicmarc chucks are guaranteed for 12 months and a large variety of accessories are available to suit them.

IMPORTANT SAFETY INFORMATION

Vicmarc wood turning chucks are manufactured from the highest quality materials to ensure a long working life. To ensure that your chuck is kept at its optimum performance please take note of the following points:

- All Vicmarc chucks have a stop pin below the number No. 4 jaw runner except the VM150 which has the stop pin below the No. 2 Jaw. Its purpose is to prevent the jaws from expanding beyond the safe working limit. The chuck must NOT be opened beyond its full extent or damage could be caused to the stop pin. A damaged Stop Pin could in turn damage the Jaw Runners. We recommend the use of a larger dovetail jaw set when working with larger scaled pieces.
- The “Screw Point” supplied with each Vicmarc Chuck should be mounted as described in the Owners Manual (page 6) . Failure to mount the screw correctly could cause damage to the screw point. Drilled holes for the screw point should be as follows:

7mm - 7.5mm for Softwoods

8mm - 8.5mm for Hardwoods

Where possible, holes should be drilled on a pillar drill.

List of Contents

Safety Precautions	Page 4
Maintenance	Page 5
Beginners Tips	Page 5
Mounting on the Lathe, Clamp Mode, Expansion Mode.....	Page 6
Operation - VM90 & VM140	Page 7
Operation - VM100 & VM120	Page 8
Operation - VM150	Page 9
Maintenance - VM150	Pages 11-13
Jaw Styles and Accessories	Pages 14-17
Exploded Diagram Chuck Jaws	Pages 18-19
The Vicmarc Guarantee	Page 20





- 1. READ AND UNDERSTAND INSTRUCTION MANUAL BEFORE OPERATING WOOD LATHE.**
2. Always wear eye protection.
3. Do not wear gloves, neckties, jewellery or loose clothing.
4. Do not operate without guards in place.
5. Rough out workpiece before installing on face plate.
6. Do not mount a split workpiece or one containing a knot.
7. Tighten all locks before operating.
8. Rotate workpiece by hand before applying power.
9. Use slowest speed when starting a new workpiece and do not exceed permitted speed.
10. Disconnect machine from power source before making repairs or adjustments.
11. Do not operate while under the influence of drugs alcohol or medication.
12. Remove the tool rest before sanding or polishing.



GENERAL MAINTENANCE


Before the chuck is mounted on the lathe, make sure that all the threads are thoroughly clean and free of debris. This will ensure the chuck will run true.

The chuck is engineered to very close tolerances and may initially be stiff to operate. With use movement will become easier. To maintain easy jaw action, regularly spray oil onto the scroll and work lever through full range of movement. Inspect chuck regularly for build up of dust in the scroll and jaws. Clean as required.

BEGINNERS TIPS


PREPARE THE WORK PIECE THE FOLLOWING WAY 200-250mm dia. 40-50mm thick; RPM 800-100

1. Drill 25mm deep and 7-8mm dia. hole in the centre of workpiece
(Avoid drilling into the end grain, this could result in less grip)
2. Make sure the workpiece is as round as possible.
3. Choose appropriate speed before you start the lathe.
4. Screw the workpiece hard against the jaws.
5. Heavy or unbalanced workpieces should not be fastened directly to the screw chuck. Use the face plate rings instead.

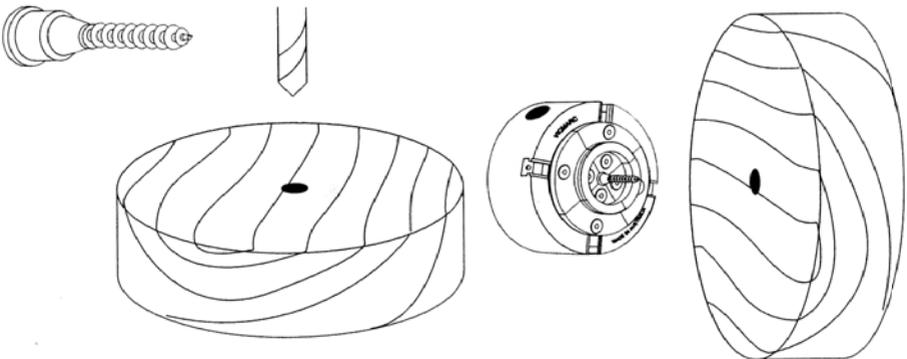


Mounting on the Lathe

The Vicmarc Uni-Chuck fits a wide range of lathe spindle sizes. This is done by changing the threaded insert. Your dealer will advise on the insert required for your lathe. Check that the insert is firmly screwed into the Chuck body and then screw the assembled chuck into the lathe spindle. Insert must be firmly seated against the lathe spindle shoulder.

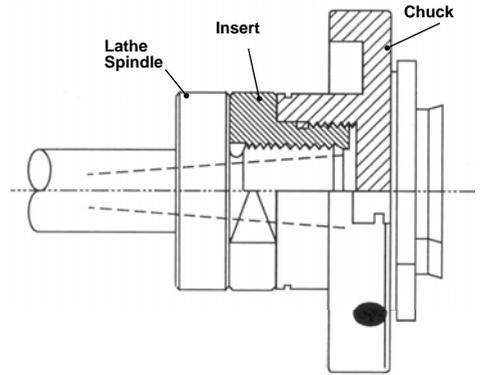

The Screw Point

The Screw Chuck is used to mount small cross grained pieces

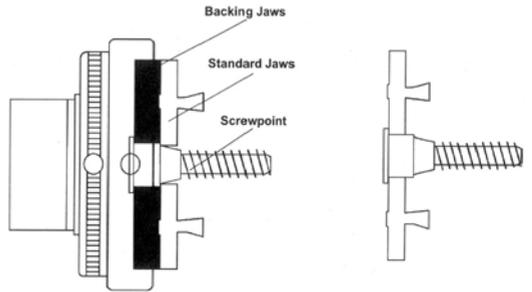


Clamp Screw Point this way for VM190 & VM 100

Clamp Screw Point this way for VM120, VM140 & VM150


Clamp Mode

With this application the workpiece is held by the jaws. To achieve a good hold, press the bowl end hard against the jaws. Fasten the workpiece to the screw or onto the face plate. When pre-turning bowls from green timber it is possible to do this between centres or with a pivot chuck. Turn a 5 to 10mm deep dovetail recess first. The sizes of all the jaw types available are shown in the tables on pages 18 and 19.

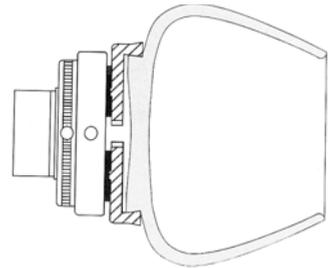

Expansion Mode

For this application a recess is turned into the workpiece. The depth of the recess depends on the actual size of the workpiece as well as the type of timber used. The minimum depth should be 5mm to 10mm

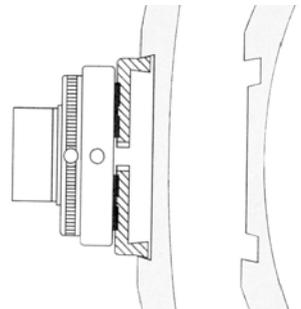


VM90 and VMI40

The VM90 and VMI40 chucks are for those who prefer to operate the chuck using the quick-acting Tommy Bars (Levers), which saves time when mounting and dismounting bowls.

The VM90's compact size makes it ideal for use on 300mm (12") capacity lathes or smaller, whilst the VMI40 will hold most work up to 500mm (20") in diameter with standard jaws.

The basic chuck includes: chuck body, two tommy bars, screw point, allen key, and the owners manual.

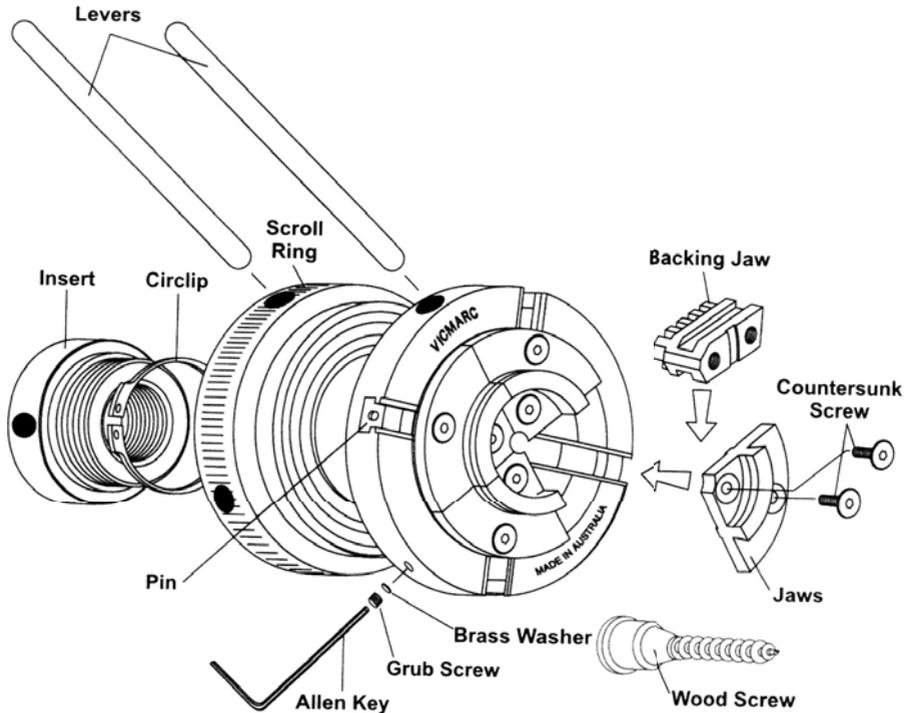

OPERATION


VM100 and VM120

The VM100 and VM120 t-bar allen key operated chucks provide one-hand tightening along with tremendous gripping power provided by the 6 to 1 ratio of the scroll. The totally enclosed back assures a consistent smooth action by preventing dust and debris from getting into the scroll of the chuck.


Keyed chucks cannot be beaten when it come to holding power.

The VM100's compact size makes it ideal for use on 300mm (12") capacity lathes or smaller, whilst the VM120 will hold most work up to 500mm (20") in diameter with standard jaws.

Basic chuck includes: chuck body, t-bar allen key, screw point allen key and the owners manual.

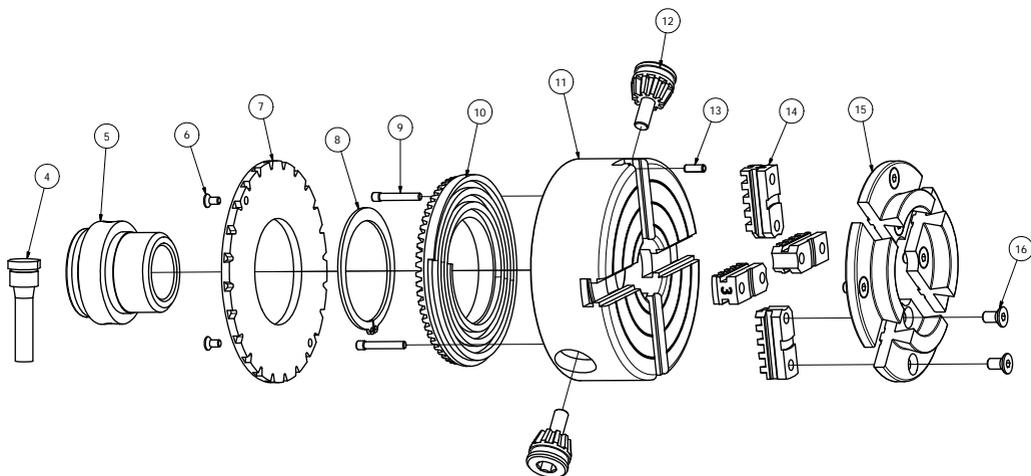

PARTS LIST					
ITEM	QTY	VM100 - PART NUMBER	VM100 - DESCRIPTION	VM120 - PART NUMBER	VM120 - DESCRIPTION
1	1	P00027	8mm T-Bar	P00028	10mm T-Bar
2	1	P00024	3mm T-Bar	P00025	4mm T-Bar
3	1	V00093	7.9mm Tommy Bar	V00091	9.5mm Tommy Bar
4	1	V00991	Wood Screw	V00991	Wood Screw
5	1	-	Insert VM90-100	-	Insert VM120-150
6	2	P00719	M4 x 8 Screw, Socket Flat Head	P00719	M4 x 8 Screw, Socket Flat Head
7	1	V00178	VM100 Backing Plate	V00178	VM120 Backing Plate
8	1	P00249	50mm External Circlip	P00251	60mm External Circlip
9	2	P00591	M5 Dowel Pin	P00591	M5 Dowel Pin
10	1	V01000	VM100 Scroll	V01001	VM120 Scroll
11	1	P00972	Chuck Body, M40x2	P00997	Chuck Body, M45x2
12	2	V00900	VM100 Pinion	V00901	VM120 Pinion
13	1	P00598	Roll Pin Dia 3 x 10mm	P00599	Roll Pin Dia 4 x 12mm
14	1	V00637	VM100 Backing Jaws	V00670	VM120 Backing Jaws
15	4	V00657	VM90-100 Standard Jaws	V00695	VM120-150 Standard Jaws
16	8	P00720	M5 x 12 Screw, Socket Flat Head	P00725	M6 x 12 Screw, Socket Flat Head

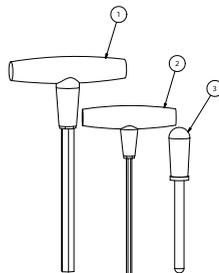

VM150


The VM150 Chuck is a new and innovative patented design with many exceptional features for the professional turner or the serious hobbyist. Jaws and inserts are compatible with the VM120 but the backing jaws have been made larger and stronger to withstand very heavy use.

The VM150 is ideal for use on 400mm (16") capacity lathes or larger.


The basic chuck includes: chuck body, one tommy bar, screw point, 2 x allen keys, and the owners manual.



VM150 Features

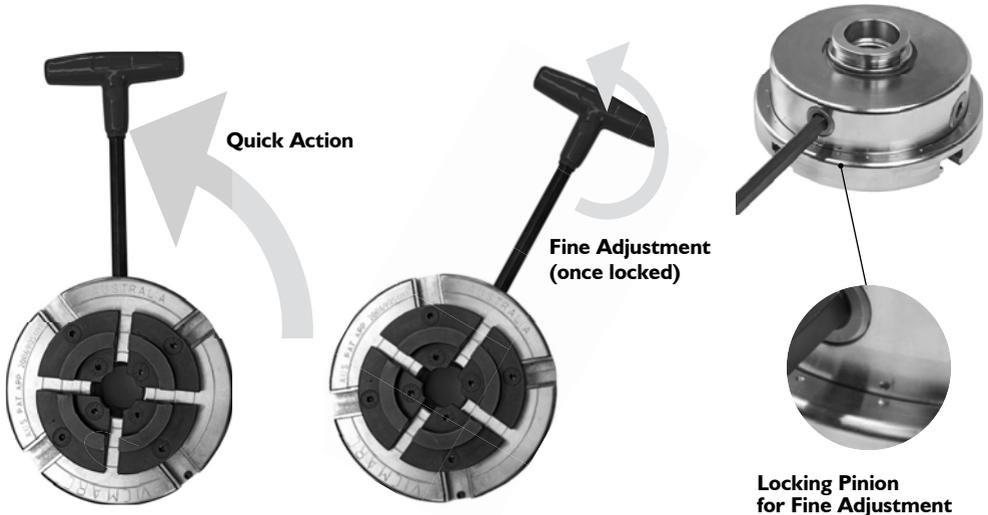

The VM150 is a revolution in chuck design from Vicmarc. To save you time and energy this chuck has two actions - one to rapidly open and close the chuck as though it was lever operated (fully open in 3 revolutions), the other to tighten using the 'T' Key as you would in a standard key operated scroll chuck. To switch from lever operated to key operated, line up the dots as shown above and rotate the locking pin using the 10mm T-bar (supplied) Turn clockwise to engage and anti-clockwise to disengage.

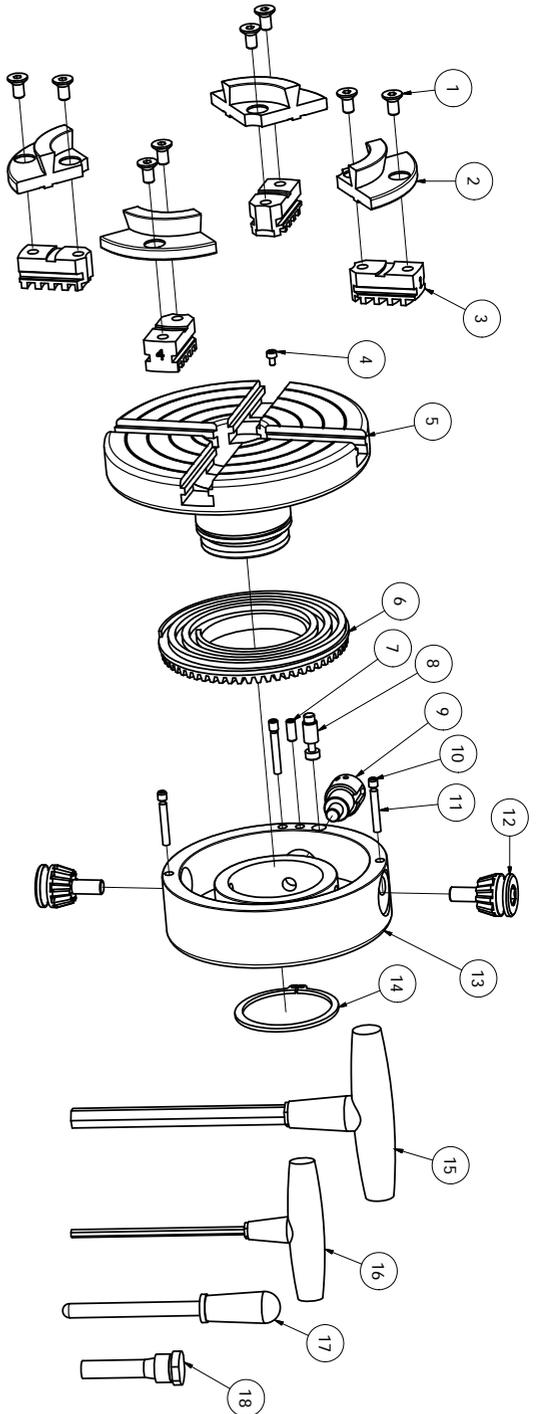

Compatible with VM120/140 Jaws

PARTS LIST				PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION
1	8	V00997	M6 x 12 Screw, Socket Flat Head	10	3	P00738	M5 x 5 socket set screw
2	4	V00695	Jawset, VM120/140 Standard	11	3	P00590	Pin, Dowel 4x25
3	1	V00697	Backing Jawset	12	2	V00901	Pinion
4	1	P00737	M3 x 5 Socket Head Cap Screw	13	1		Chuck Housing, VM150
5	1		Chuck Body, VM150	14	1	P00250	55mm external circlip
6	1	V01001	Scroll	15	1	P00028	10mm T-Bar
7	1		M5 x 12 Ball Catch	16	1	V00091	9.5mm Tommy Bar
8	1	V00886	Locking Pin	17	1		Chuck Wood Screw
9	1		Locking Pinion	18	1	V00991	




VM150 Chuck Accessories

Before undertaking any maintenance work to the VM150 chuck please familiarise yourself with the individual parts and the correct terminologies.

VM150 Backing Jaw Identification


Each jaw should be individually numbered. Should the numbers become obscured the jaws can be easily identified by the scroll patterns shown below.

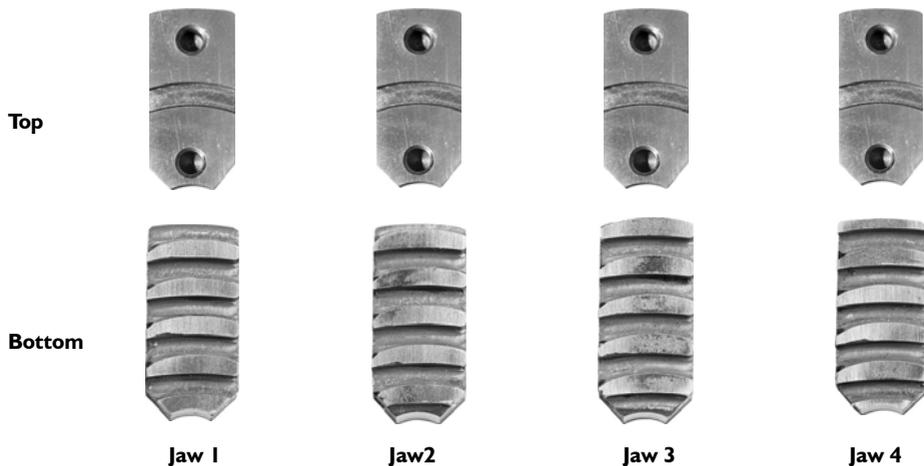

VM150 Scroll




Scroll, Face Up

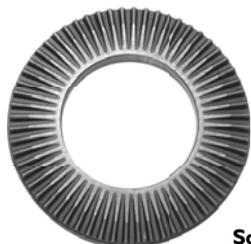


Scroll, Face Down

VM150 Pinions

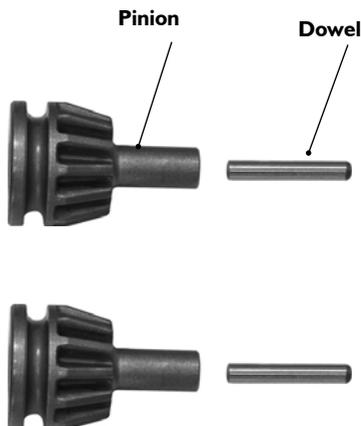

VM150 Back Jaw Mounting Sequence

Stop Screw

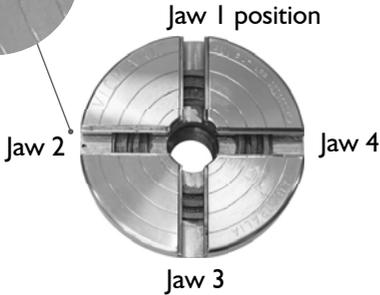

All the backing jaws are numbered to ensure easy assembly. The number two jaw is where the stop screw is as pictured on the left.

Before commencing it is better to orientate the chuck so that the stop screw is on your left. Then begin to feed the jaws from No.1 at the top and continue in an anticlockwise direction as shown below.




VM150 Dismantling

To begin dismantling the VM150 chuck, place it on a clean bench with the back facing up. **1** Remove the circlip. **2** Turn the chuck over so that the jaws are now upright. Undo and remove the stop screw situated by jaw two. **3** Slide all the jaws out. **4** Pull off the frontplate to show the inside of the chuck. The scroll can then be removed from the backplate. **5** To remove the pinions from the backplate first remove the grub screw that holds the dowel in, then turn the back plate so that the dowel that holds the pinion is facing downwards. **6** Gently tap the back plate with a soft hammer until the dowel drops out. You may then remove the pinion.



VM150 Reassembling

Make sure that all the components have been thoroughly cleaned and re greased before re assembly. **1.** Place the front plate face down on a clean workbench. Then making sure the scroll face is pointing downwards with the gear (or gear teeth) facing upwards, drop the scroll into the body. **2.** Put the backing plate on - do not force this together as the gear may be damaged. Place the allen key into the pinion and slightly rotate until the teeth mesh and the circlip groove becomes visible. **3.** Replace circlip. **4.** Turn over the chuck. Then rotate the scroll until the start of the scroll thread is in the number one position as shown in picture. **5.** Replace jaw number 1, rotate 1/4 revolution anticlockwise, replace jaw number 2, rotate 1/4 revolution and so on until all the jaws are replaced. **6.** Once the scrolls have been replaced, rotate the allen key until the screw hole at jaw number two becomes visible. Screw in the stop screw ensuring that it is not over tightened.

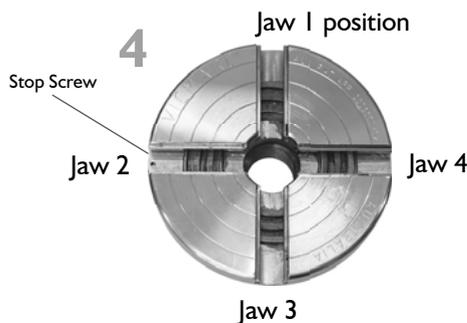


JAW STYLES and ACCESSORIES

This is a sample of the Vicmarc chuck jaws and accessories. For the full range see pages 18 to 19 to find the jaws that suit your requirements. These jaw styles suit all chucks types.

Step Jaws

Step Jaws, designed by the famous Australian woodturner and author Richard Raffan, are used for holding a range of spigot sizes with minimum jaw movement and without the necessity to change the jaws. Boxes are easily turned using the step jaws. The bottom can be turned by holding the rim without leaving unsightly pressure marks.

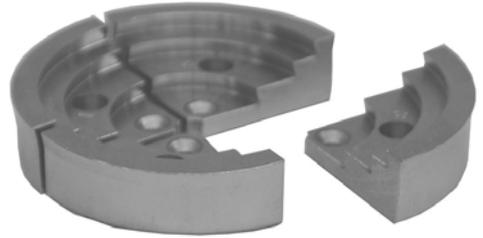


25mm Jaws

These jaws are used for expansion into small recesses and for firm holding of fine spindle work, such as earrings, chess pieces etc. They are ideal for turning salt and pepper shakers. To turn very small articles, the jaws can be unscrewed and the backing jaws only can be used.



Bowl Jaws

The adjustable jaws allow you to re-chuck bowls for finishing the bottom or do light clean-up work on the foot of the bowl. To mount the bowl, the bowl is reversed and held by the rim, either internal or external, with 8 unique soft plastic stoppers which are mounted on the face of the jaws. The numerous mounting holes on the face of the jaws allow you to locate the stoppers in any number of positions. The range of sizes listed on pages 18 and 19.

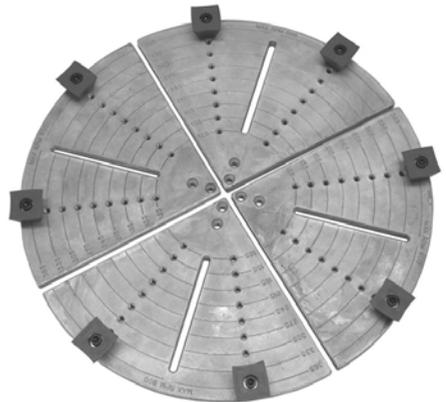

Long Nose Jaws

These jaws allow better access between the chuck body and the rear of the workpiece. They are also very practical when pre-turned workpieces or long workpieces have to be refastened. For example, when turning serviette rings or remounting rough turned work.



Face Plate Rings


These can be used instead of the traditional faceplate. They facilitate remounting of prepared blanks by mounting directly onto the chuck jaws. Also can be used for turning green wood which will require returning later on. Fit standard jaws supplied on chuck.



Shark Jaws

Shark jaws are so called because of their serrated inner and outer jaw surfaces. These extended jaws provide an aggressive hold. They hold cylinder spigots much more safely than standard jaws. They are easier and faster than traditional jaws used to turn long workpieces.

Available in 48mm to 88mm for the VM90 and VM100, 55mm to 130mm for the VM120, VM140 and VM150.

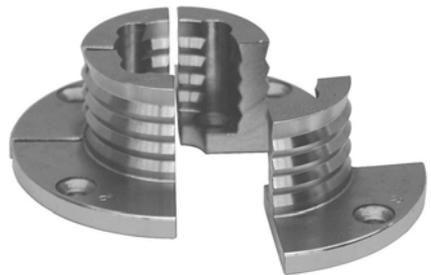


Dovetail Jaws

Dovetail jaws are designed for mounting bowls by expanding into a recess or by clamping onto a spigot. The size indicated is the outside measurement of the jaw face when fully closed. Dovetail jaws provide approximately 25mm of expansion beyond their specified size.



Multi - Purpose Jaws

By removing one or more of the dovetail segments from these jaws, they are adaptable to a variety of uses. The wide range of expansion and contraction of the Uni-Chuck provides for unique adaptability when using these jaws.

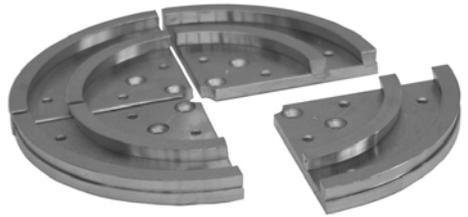

3 - in - 1 Screw Face Plate

This screw chuck has three alternative diameters of 50mm, 75mm and 100mm to give optimum support to any size of work. Made from K1045 medium tensile steel. Fitted with the Glaser screw. Fits most lathes. Alternative thread sizes available by using Vicmarc® chuck inserts. Some direct threads also available.



Soft Jaws

Would you like to turn your own custom made jaws to suit your work piece? Now you can do it with the all new Vicmarc Acetyl Soft Jaws. They are a convenient and simple to use accessory. As the jaws can be turned precisely to suit the job, the work piece will always be true and concentric. Jaws can also be drilled, sawn or tapped. Two sizes are available - 125mm and 150mm.



Vacuum Plate

This device has been designed as an aid to woodturning. It enables an item to be re-mounted on the lathe for finishing without risking further holding marks. This device can be fitted directly into a Vicmarc® chuck via the standard jaws, or an insert can be supplied as an extra to allow mounting directly onto the spindle. Size - 300mm.






All measurements listed refer to the outside diameter.



Vacuum Chuck








Precision machined cast aluminium. Each cylinder includes two soft 'o' ring seals for internal or external pickups. This unit works in conjunction with the Vacuum Plate, fitted with a rotary vacuum adaptor that connects to a shop or domestic vacuum. The rotary adaptor is fitted with two ball bearings and lets the lathe spindle turn freely while the hose and connection remain stationary.

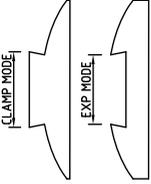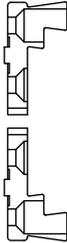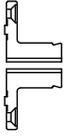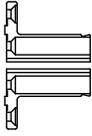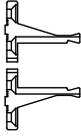




EXP MODE	47	72	99	99	144	148 92	25	35	36
VM90 VM100  	 STANDARD	 DOVETAIL 2 STEP 70mm	 DOVETAIL 100mm	 STEP	 DOVETAIL 144mm	 MULTI- PURPOSE	 PIN 25mm	 PIN 35mm	 LONG NOSE
CLAMP MODE	33	55 44	83	84, 70 45	128	128 72	EXPANSION ONLY	>7	25
PART NUMBER	V00657	V00644	V00642	V00658	V00643	V00649	V00650	V00651	V00647

VM90/100 JAW RANGE

ALL MEASUREMENTS ARE DIA.(mm)
 OF JAWS IN PERFECT CIRCLE
 +37mm for max grip, -3mm for min grip

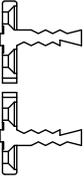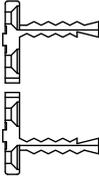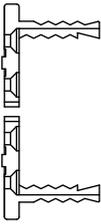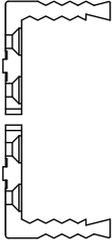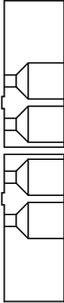
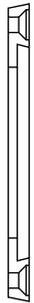
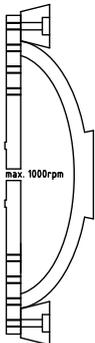
48	55	74	88	125	74	99	144-270	145-330	153-430
 SHARK 48mm	 SHARK 55mm	 SHARK 74mm	 SHARK 88mm	 PLASTIC 125mm	 FACE PLATE RING 70mm	 FACE PLATE RING 90mm	 max. 1200rpm BOWL 220	 max. 1000rpm BOWL 285	 max. 800rpm BOWL 385
35	42	60	74	-	46	70	95-220	95-270	105-375
V00653	V00654	V00655	V00656	V00652	V00400	V00401	V00639	V00640	V00641

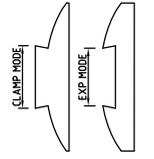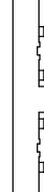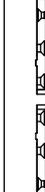

EXP MODE	68	105	128	148	173	198	223	127	215 148	210 148	150	
VM120 VM140 VM150  												
	STANDARD	DOVETAIL 105mm	DOVETAIL 128mm	DOVETAIL 148mm	DOVETAIL 173mm	DOVETAIL 198mm	DOVETAIL 223mm	STEP	DOVETAIL DUO	MULTI- PURPOSE	PLASTIC 150mm	
CLAMP MODE	48	84	106	126	150	175	200	111, 97 70, 50	195 128	190 128	—	
PART NUMBER	V00695	V00676	V00677	V00678	V00679	V00680	V00682	V00696	V00683	V00686	V00690	

VM120/140/150 JAW RANGE

ALL MEASUREMENTS ARE DIA. (mm)
OF JAWS IN PERFECT CIRCLE
+37mm for max grip, -3mm for min grip

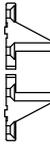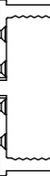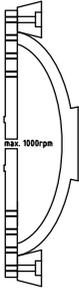25	35	47	55	68	83	130	127	168	145-360	153-460	158-555
											
PIN 25mm	PIN 35mm	LONG NOSE	SHARK 55mm	SHARK 68mm	SHARK 83mm	SHARK 130mm	FACE PLATE RING 120mm	FACE PLATE RING 150mm	BOWL 285	BOWL 385	BOWL 485
>7	>7	30	35	48	65	110	100	132	93-313	105-410	110-500
V00687	V00688	V00684	V00692	V00693	V00694	V00691	V00402	V00403	V00672	V00673	V00674

VICMARC MACHINERY P/L
WWW.VICMARC.COM





Vicmarc Machinery Pty Ltd

52 Grice Street Clontarf QLD 4019 Australia

Phone (07) 3284 3103

Fax (07)3283 4656

Int Ph 61-7 3284 3103

Int Fax 61-7 3283 4656

Email vicmarc@vicmarc.com

Web www.vicmarc.comAAA

The Vicmarc® Guarantee

Vicmarc Machinery, manufacturers of Vicmarc machine tools, hereby guarantee the purchaser of the Uni - Chuck that the chuck was precision engineered from the finest materials available and was thoroughly inspected and tested before leaving the factory.

If, within 12 months following the date of delivery, the chuck is proven to have been defective as a result of faulty materials or workmanship, Vicmarc Machinery will repair or replace the chuck free of charge. This guarantee is subject to the following conditions:

1. The chuck shall be returned to Vicmarc Machinery within 12 months with a brief description of the complaint.
2. The name and address of the purchaser, together with the date of purchase and supplier details shall accompany the parts.
3. Vicmarc Machinery will accept no responsibility whatsoever under the guarantee or otherwise if the chuck is not used strictly in accordance with the instructions supplied, or if the fault can reasonably be explained by carelessness or negligence.
4. The purchaser is responsible for all costs incurred in transport and packaging to and from Vicmarc Machinery.
5. In the case of accident, liability is expressly excluded when the chuck is tampered with or altered without authorisation.

Overseas purchasers are advised to obtain local guarantees from their Uni - Chuck agent. Conditions may vary to those detailed above.

Distributed by: